# RCL07 Call receiver

## internal programming



The call receiver RCL07 signals incoming calls by switching a relay output according to the programmed operating mode.

If the acknowledgment function is activated, calls can be acknowledged via a button on the device or conveniently with a separate radio transmitter.

Weak batteries from learned radio transmitters are signaled via the second relay contact.

The call function can be muted for 15 minutes or unlimited, for example to avoid false alarms during daily care or when not in use.

The RCL07 is programmed exclusively via the internal operating buttons, so that accidental reprogramming is precluded.




RCL07E5002C30

#### **Technical specifications**

| the second secon |   |
|--|---|
| Coding   | Easywave Up to 32 CALL, 8 ACKNOWLEDGE, 8 CARE and 8 MUTE transmitters can be programmed.                |
| Frequency  | 868.30 MHz  |
| Channels   | 2   |
| Power supply   | 12-24 V AC / 12-32 V DC   |
| Power consumption  | 10 mA standby<br>45 mA load (both relays are switched)  |
| Functions  | CALL function ACKNOWLEDGE function CARE function MUTE function battery undervoltage detection           |
| Outputs  | 2 potential-free relay contacts (combined) 1x changeover (call) 1x normally open (battery undervoltage) |
| Maximum contact load AC $(\Omega)$   | 120 V AC / 1A / 62 W  |
| Maximum contact load DC  | 50 V DC / 1A / 30 W   |
| Protection degree  | IP54 (with installed ø 5,30 mm cable)   |
| Operating temperature  | -20°C to +60°C  |
| Dimensions (W/L/H)   | 35/80/20 mm   |
| Color  | white similar RAL 9003  |
|  |   |

#### Wiring diagram

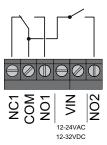

### Scope of delivery

- · Call receiver
- · Operating manual

#### Models

| Product number | Description  |
|----------------|--|
| RCL07E5002C30  | Call receiver, Easywave, 12–24 VAC / 12–32 VDC, potential-free, IP54, battery low, internal programming, white |

RADIO SYSTEMS: Flexibility | Convenience | Energy efficiency | Security